

USER INSTRUCTIONS:

To inflate and assemble the boat follow these instructions.

Step # 1 Unpack the carton

Step # 2 Open the Carry Bag - and check the following contents;

1. One complete hull
2. One stirrup pump with adaptors
3. One wooden seat
4. Two oars
5. One repair kit
6. Four Floor boards or one inflatable floor
7. One valve wrench
8. One copy of owners manual

Step# 3 Unfold the boat and check the valves are closed. If they are open - press the middle pin in the valve and turn through 90 degrees anti - clockwise.

For boats with wooden slatted floors:

Step# 4 Install the floor boards, lay the boards out from transom to the bow. Slide the boards through the black sleeves on the floor, and then press gently down to ensure they are correctly positioned. Do this BEFORE inflating the boat.

Step# 5 Inflating the boat, Insert the correct adaptor into inflation hose and onto the pump first - and then insert into the boat valve. For best results, both the compartments should be inflated alternatively, so that the pressure is built up gradually in both chambers. Inflate both compartments up to the recommended working pressure of 2.25psi (0.15bar) - **do not over inflate the compartments.**

Please ensure that after inflation the valve cap must be replaced.

For boats with air floors:

Step# 4 - (A) First partially inflate the boat (chambers alternatively), then place uninflated air floor onto floor of boat.

4 - (B) Fully inflate the main boat tubes up to their full working pressure of 2.25psi (0.15 bar)

4 - (C) Inflate the air floor to a maximum of 3psi

OTHER ACCESSORIES:

Step# 6 1. **Assembly of Oar:** To assemble the oars - depress the spring pin in the end of the shaft and insert into the other half of the oar, until the pin locates.

2. **Fixing oar into position:** To locate the oar on the boat - slide the oar through the elastic loop and insert the oar into the rowlock. At the aft end of the tubes there are stowage clips to hold the oars when not in use.

3. **Attach the bow storage bag (if supplied)** Attach the four connecting tapes with buckles to the four buttons on the bow.

Step# 7 **Check ropes (lifeline and painter line):** Check that the central D ring on the bow has the white painter rope securely attached. Also check that the lifelines that are located on each tube are securely tied. **Ensure that painter does not foul outboard engine propeller(if fitted).**

Step# 8 **Install the Wooden seat:** Position the angled seat bracket in the seat patches on the tubes prior to inflating the boat.