

**PRESSURE:**

**A LOSS OF 20% AIR PRESSURE IN A 24 HOUR PERIOD IS NORMAL ESPECIALLY IN DIRECT SUNLIGHT AND WARM CONDITIONS.**

**IF THE PRESSURE DROPS 10MB/5HOURS - THEN CHECK THE BUOYANCY TUBES FOR LEAKS, ALSO CHECK ALL VALVES. CHECK THAT VALVES ARE NOT DAMAGED, CHECK THAT NOTHING IS CLOGGING THE VALVES, AND CHECK THAT VALVES ARE FULLY CLOSED**

**STORAGE:**

**THE BOAT MUST BE STORED IN A WELL VENTILATED AND DRY ENVIRONMENT.**

**THE TEMPERATURE RANGE FOR STORAGE IS 0 - 35°C**

**KEEP AWAY FROM HEAT SOURCES**

**HUMIDITY SHOULD NOT EXCEED 80 %**

**KEEP AWAY FROM SHARP OBJECTS, AND DO NOT STORE HEAVY ITEMS ON TOP OF THE BOAT.**

**PROTECT FROM RODENT ATTACK (RATS AND MICE)**