

GIMBAL RING AND PIVOT HOUSING

INT



GIMBAL RING AND PIVOT HOUSING

- | | |
|--------------------------|--------------------------|
| ① Switch cover | ⑩ Washer |
| ② Trim sender | ⑪ Bushing |
| ③ Coupler | ⑫ Steering pivot shaft 2 |
| ④ Bushing | ⑬ Spring pin |
| ⑤ Pivot bolt | ⑭ Continuity wire |
| ⑥ Washer | ⑮ Trim limit switch |
| ⑦ Steering lever | ⑯ Hose nipple |
| ⑧ Washer | ⑰ Pivot housing |
| ⑨ Steering pivot shaft 1 | ⑱ Gasket |

- ⑲ Retainer
⑳ Gimbal ring

*** NOTE:**
See page 5-11.

A	93 Nm (9.3 m • kg, 67 ft • lb)
B	54 Nm (5.4 m • kg, 39 ft • lb)
C	80 Nm (8.0 m • kg, 58 ft • lb)
D	3.7 Nm (0.37 m • kg, 2.7 ft • lb)

