


INFLATION SYSTEM

The inflation system is composed of:

THE STANDARD FOOT PUMP

- a. connecting tip
- b. hose end piece
- c. hose base
- d. outlet for inflation

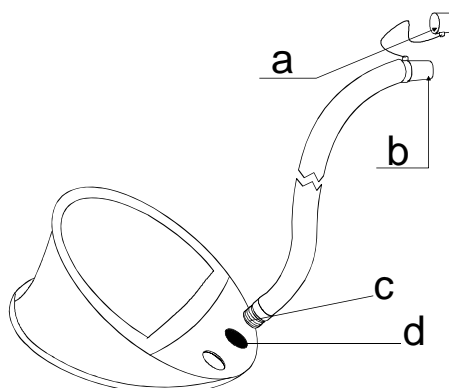


ENGLISH

THE STANDARD VALVES

(1) cap (2) valve insert (3) base

To activate the standard valves into INFLATION position:

- Free the valve insert from its protection.
- Unscrew the valve cap.
- Screw the valve support onto its base (screw it tight but without exaggeration, not to deteriorate the screw thread) and check that the valve cap stays accessible.

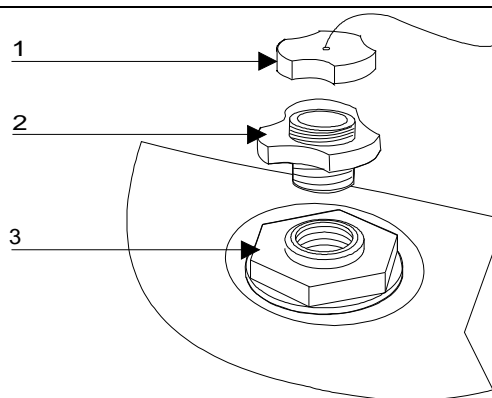

TO DEFLATE:

Unscrew the valve support from its base

THE "EASY-PUSH" VALVES

To change position:

	Inflation position	Deflation position
Push	The membrane is closed, the knob is up	The membrane is open, the knob is down

NOTICE:

To screw or unscrew the valve caps, turn without pressing or forcing (this could unscrew the inner valve system).